§ 56.6700

EQUIPMENT/TOOLS

§56.6700 Nonsparking tools.

Only nonsparking tools shall be used to open containers of explosive material or to punch holes in explosive cartridges.

§56.6701 Tamping and loading pole requirements.

Tamping and loading poles shall be of wood or other nonconductive, non-sparking material. Couplings for poles shall be nonsparking.

MAINTENANCE

§56.6800 Storage facilities.

When repair work which could produce a spark or flame is to be performed on a storage facility—

- (a) The explosive material shall be moved to another facility, or moved at least 50 feet from the repair activity and monitored; and
- (b) The facility shall be cleaned to prevent accidental detonation.

§56.6801 Vehicle repair.

Vehicles containing explosive material and oxidizers shall not be taken into a repair garage or shop.

§ 56.6802 Bulk delivery vehicles.

No welding or cutting shall be performed on a bulk delivery vehicle until the vehicle has been washed down and all explosive material has been removed. Before welding or cutting on a hollow shaft, the shaft shall be thoroughly cleaned inside and out and vented with a minimum ½-inch diameter opening to allow for sufficient ventilation.

§ 56.6803 Blasting lines.

Permanent blasting lines shall be properly supported. All blasting lines shall be insulated and kept in good repair.

GENERAL REQUIREMENTS

§ 56.6900 Damaged or deteriorated explosive material.

Damaged or deteriorated explosive material shall be disposed of in a safe manner in accordance with the instructions of the manufacturer.

§56.6901 Black powder.

- (a) Black powder shall be used for blasting only when a desired result cannot be obtained with another type of explosive, such as in quarrying certain types of dimension stone.
- (b) Containers of black powder shall
- (1) Nonsparking;
- (2) Kept in a totally enclosed cargo space while being transported by a vehicle:
- (3) Securely closed at all times when—
- (i) Within 50 feet of any magazine or open flame;
- (ii) Within any building in which a fuel-fired or exposed-element electric heater is operating; or
- (iii) In an area where electrical or incandescent-particle sparks could result in powder ignition; and
- (4) Opened only when the powder is being transferred to a blasthole or another container and only in locations not listed in paragraph (b)(3) of this section.
- (c) Black powder shall be transferred from containers only by pouring.
- (d) Spills shall be cleaned up promptly with nonsparking equipment. Contaminated powder shall be put into a container of water and shall be disposed of promptly after the granules have disintegrated, or the spill area shall be flushed promptly with water until the granules have disintegrated completely.
- (e) Misfires shall be disposed of by washing the stemming and powder charge from the blasthole, and removing and disposing of the initiator in accordance with the requirement for damaged explosives.
- (f) Holes shall not be reloaded for at least 12 hours when the blastholes have failed to break as planned.

§ 56.6902 Excessive temperatures.

- (a) Where heat could cause premature detonation, explosive material shall not be loaded into hot areas, such as kilns or sprung holes.
- (b) When blasting sulfide ores where hot holes occur that may react with explosive material in blastholes, operators shall—

278